


Using Kindle

Example – Kindle Keyboard

Home menu

The Home screen displays a list of all Kindle reading materials: books, newspapers, magazines, blogs, personal documents, as well as audiobooks.

Navigate Kindle Keyboard using the menus. Kindle Keyboard's menus are context sensitive, they all work the same way. The 5-way controller navigates within any menu, press it to select an item.

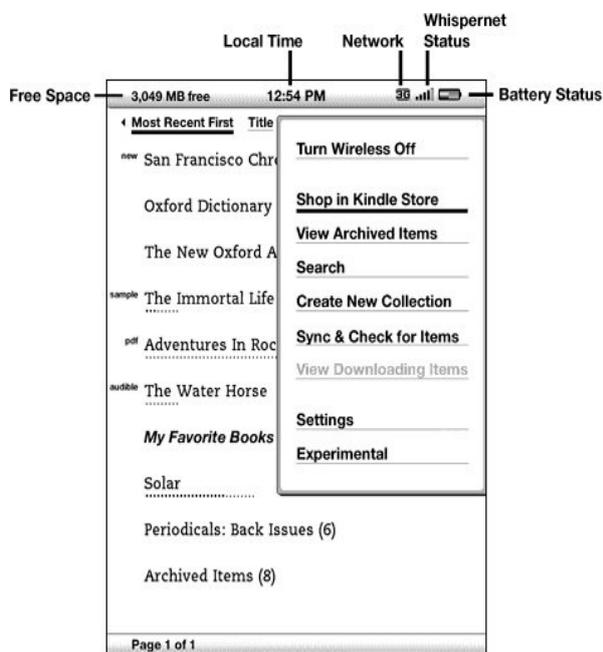

Device name: The name of your Kindle Keyboard.

You can edit this name on the Settings screen.

Show options: Choose which types of content you want displayed in Home.

Sort options: Choose the order you want content displayed in Home.

Title: The title of the item.

Author or Date: For books, author of item. For periodicals and blogs, the date is listed.

Unread title: "New" is not yet opened and less than 24 hours old. Once opened, or more than 24 hours passed, "new" label removed.

Wireless: Indicates Wi-Fi usage (or 3G if you have the Wi-Fi and Free 3G model and are outside Wi-Fi coverage).

Collections: Sorts content based on categories created on Kindle Keyboard to organise your content.

Menu button from within a book.



Pressing the "Menu" button, displays choices related to the screen you are viewing.

Screen Rotation

The Kindle Keyboard screen image can be rotated so you can see the entire width of a web page or

magnify the page of a PDF file. The buttons work the same in either rotation, but the 5-way controller movements are switched to match the rotation. You can lock the screen into portrait or landscape mode:

1. Press the "Text" key located on the bottom row of the keyboard. Screen Rotation is displayed at the bottom of the menu.
2. Move the 5-way to select one of the four options to lock the display in a set orientation:
 - Portrait
 - Landscape with the keyboard on the left
 - Portrait with the keyboard at the top
 - Landscape with the keyboard on the right
3. Press the controller to confirm your choice.